


Servicing the Motronic injection system

Fitting locations - Overview

1. Ignition coils (N and N128) with output stage (N122)
2. Sensor for coolant temperature (G62)
3. Throttle valve control part (J338)
4. Intake air temperature sensor (G42)
5. Connector
 - ♦ For Lambda probe and Lambda probe heating (black)
 - ♦ For engine speed sensor (grey)
 - ♦ Knock sensor 1 (green)
 - ♦ Knock sensor 2 (blue)
6. Engine control unit

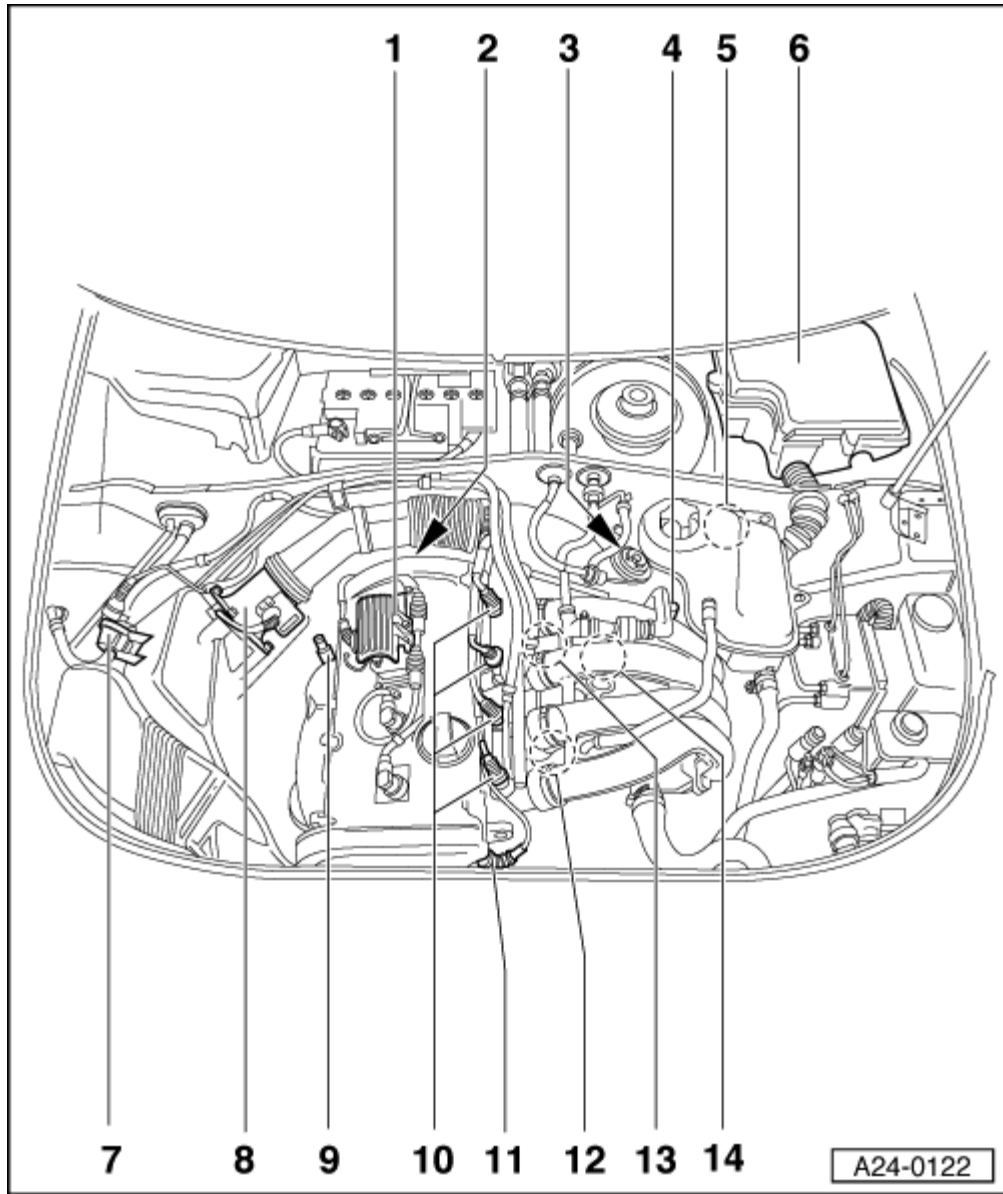

7. Activated charcoal filter solenoid valve 1 (N80)
8. Air mass meter (G70)
9. Lambda probe (G39) with lambda probe heating -(Z19)
10. Injector (N30...N33)
11. Hall sender (G40)
12. Knock sensor 1 (G61)
13. Knock sensor 2 (G66)
14. Engine speed

sensor (G28)

