

# Checking lambda control

## Removing and installing lambda probe

### Removing

- Disconnect the connector to the lambda probe => Installation locations - Overview - Page [24-4](#).
- Unscrew the lambda probe using V.A.G 3337/9.

### Installing

Installation is performed in the reverse sequence.

Tightening torque: 50 Nm

#### **Note:**

*The screw thread on the lambda probe is coated with assembly paste. This paste must not be allowed to penetrate the openings on the probe.*