

## Removing and installing convenience system central control unit -J393-


### Removing

- Remove A-pillar trim → Rep. Gr.70.
- Remove driver's seat → Rep. Gr.72.

**Note**

Seat belt at seat frame does not have to be unfastened.

- Fold back floor covering.
- Release cover for electronics box (driver's side) -arrows- and fold cover towards right.

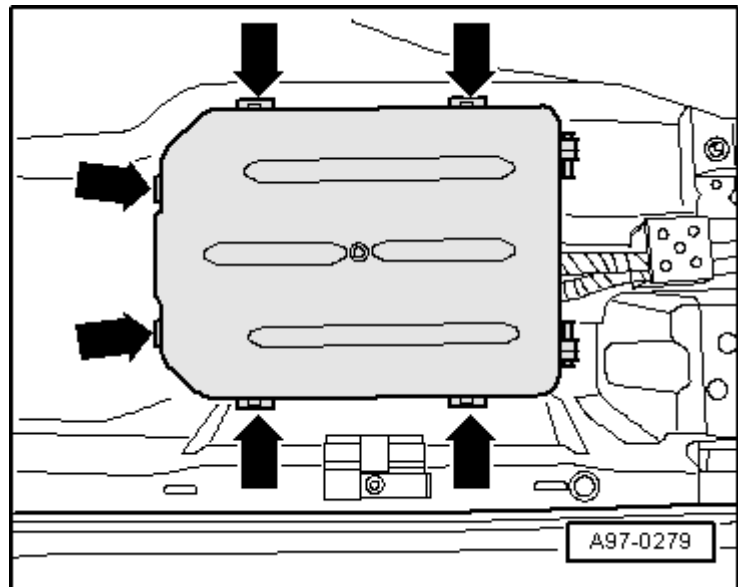

- Release retaining clips -arrows- and remove convenience system central control unit -J393--item 1- from electronics box.
- Unplug connectors -2 ... 6-.

**Note**

Exact assignment of driver's side electronics box can be found in appropriate current flow diagram → [Current flow diagrams](#), [Electrical fault finding and Fitting locations](#).

### Installing

Installation is carried out in the reverse order; note the following:

- Install A-pillar trim → Rep. Gr.70.
- Install driver's seat → Rep. Gr.72.

